


Table of Contents


Installation of FaceID Terminal.....	2
Startup.....	3
Input and Delete Letters.....	3
Exit the Current Menu.....	3
Set Administrator.....	3
Function Menu.....	3
Register an Employee.....	4
Modify an Employee.....	4
Delete an Employee.....	4
Clear Records.....	4
Record Inquiry.....	4
Modify or Delete Administrator.....	5
Set System Time.....	5
Set Volume.....	5
Set ID Address for the Terminal in a Network.....	5
Set Work Code.....	5
Set Status Switch.....	6
Set Default Setting.....	6
Set Ring Time.....	6
View System Information.....	6

Device User Manual

Installation of FaceID Terminal

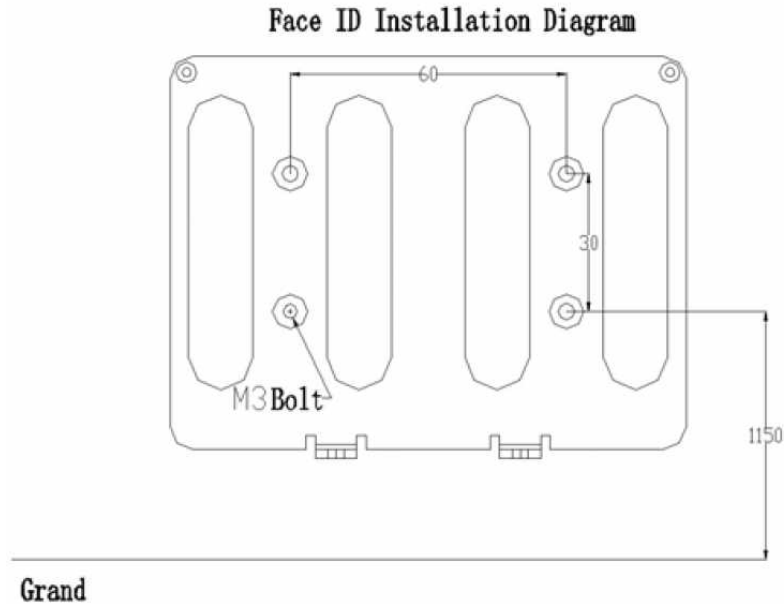

- Drill 2 bottom anchor holes on the wall according to the diagram above, and the distance between the below holes and ground could be 1.15m or you can adjust the distance to the suitable height;

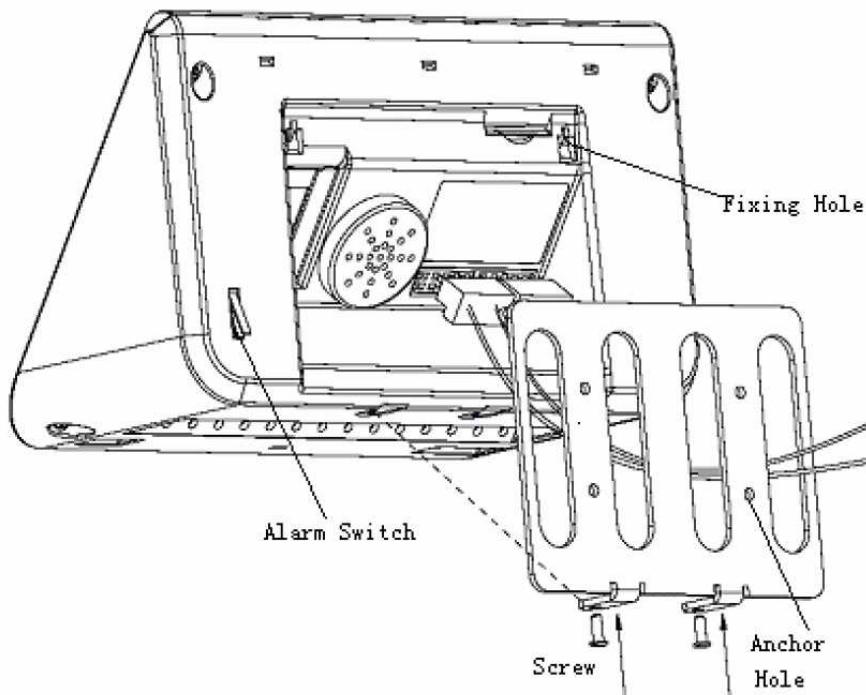

- Plug the standard power adapter into the power jack
- Plug the RJ45 crystal port of net cable into the net cable jack

- Fix the mounting bracket into the wall with two screws first and then drill 2 top anchor holes and put two more screws in those holes
- Insert the fixing holes at the back of device into the protrude pins which are placed at the mounting barcket, and press it downs softly, keep the device hanging on and joint with the mounting bracket
- Fix 2 screws at the bottom of device

Startup

Plug the power adapter in, the standby interface will show up

Input and Delete Letters

Press NUMBER 2 - 9 on the terminal surface according to the input letter (for example, in order to input 'a' or 'b' or 'c', then press 2) → optionally, press ESC for capital letters → press "↑"/ "↓" keys to select the letter (in order to choose 'b', press "↓" key once) , press OK

Press "←" key to delete letters

Exit the Current Menu

Press ESC

Set Administrator

Press MENU → press NUMBER 1 for Admin 1 → input the Job Number, press OK → input password, press OK → confirm this password, press OK → aim the admin head at the lens + follow the prompt information (watch lens, lower your head, raise your head, saving, etc.) → Done

Note: users should take off glasses in the face verification process.

Function Menu

Press MENU → input password, press OK → face recognition function starts → the Function Menu includes:

1. Register User
2. Modify User

3. Delete User
4. Clear Record
5. Record Inquiry
6. Set Admin
7. Set System
8. System info

Press the NUMBER according to the function you want to use

Register an Employee

In Function Menu, press NUMBER 1 → input employee ID, press OK → input employee name (just type abbreviated words since we will edit them again in the software), press OK → aim the employee's head at the lens + follow the prompt information (watch lens, lower your head, raise your head, saving, etc.) → Done

Modify an Employee

In Function Menu, press NUMBER 2 → input employee ID, press OK → input new employee name, press OK → aim the employee head at the lens + follow the prompt information (watch lens, lower your head, raise your head, saving, etc.) → Done

Delete an Employee

In Function Menu, press NUMBER 3 → input employee ID, press OK → press NUMBER 1 to delete one employee or NUMBER 2 to delete all employees → Follow the prompt instruction and done

Clear Records

In Function Menu, press NUMBER 4 → press OK to confirm or press ESC to cancel

Record Inquiry

In Function Menu, press NUMBER 5 → choose either

- leave "ALL" for record inquiry of all employees; or
- input the employee ID (Note: input ID without 0 in front of it, e.g. enter 2 instead of 02 or 002)

→ press “↓” key once to the next box → input the appropriate number → continuously press “↓” key once and input number until finished → press OK

Modify or Delete Administrator

In Function Menu, press NUMBER 6 to set Admin → press NUMBER 1 – 6 to modify or delete the set Administrator → press either NUMBER 1 for Modify User No., NUMBER 2 for Modify Password, NUMBER 3 for Register Again and NUMBER 4 for Delete Admin

Set System Time

In Function Menu, press NUMBER 7 → press either NUMBER 1 to set Date and Time or NUMBER 2 to set DST

Set Volume

In Function Menu, press NUMBER 7 → press NUMBER 2 to set Volume → press either NUMBER 1 to set High, NUMBER 2 to set MIDDLE and NUMBER 3 to set LOW

Set ID Address for the Terminal in a Network

In Function Menu, press NUMBER 7 → press NUMBER 3 to set Network → input IP address, press “↓” key once to the next box and input number until finished → press OK → input Mask Code, press “↓” key once to the next box and input number until finished → press OK → input Gateway Address, press “↓” key once to the next box and input number until finished → press OK → Done and system restarting

Set Work Code

In Function Menu, press NUMBER 7 → press NUMBER 4 to set Work Code → press a NUMBER according to the function you want to use:

1. Open Work Code
2. Close Work Code
3. Browse Work Code
4. Add Work Code
5. Modify Work Code
6. Delete Work Code

Set Status Switch

In Function Menu, press NUMBER 7 → press NUMBER 5 to set Status Switch → press a NUMBER according to the function you want to use:

1. Status Switch Time
2. Browse Status
3. Add Status
4. Modify Status
5. Delete Status

Set Default Setting

In Function Menu, press NUMBER 7 → press NUMBER 6 to set Default Setting → press OK to accept or press ESC to cancel

Set Ring Time

In Function Menu, press NUMBER 7 → press NUMBER 7 to set Ring Time → choose

- press NUMBER 1 to select Ring (NUMBER 1 for air raid siren, NUMBER 2 for alarm, NUMBER 3 for bell ring, NUMBER 4 for hooter)
- press NUMBER 2 to set Ring Time → press a number between 1 and 7 for a day between Monday and Sunday → press “↑”/ “↓” keys to select the time to set → press OK → press NUMBER 1 to edit ring time or press NUMBER 2 to set the bell on or off.
- press NUMBER 3 to set Ring Time Limit → input number between 3 and 9 → press OK to accept or press ESC to cancel

View System Information

In Function Menu, press NUMBER 8 → choose

- Press NUMBER 1 to view capacity information of users and records
- Press NUMBER 2 to view the terminal's information